




Setup Guide

CamController.com

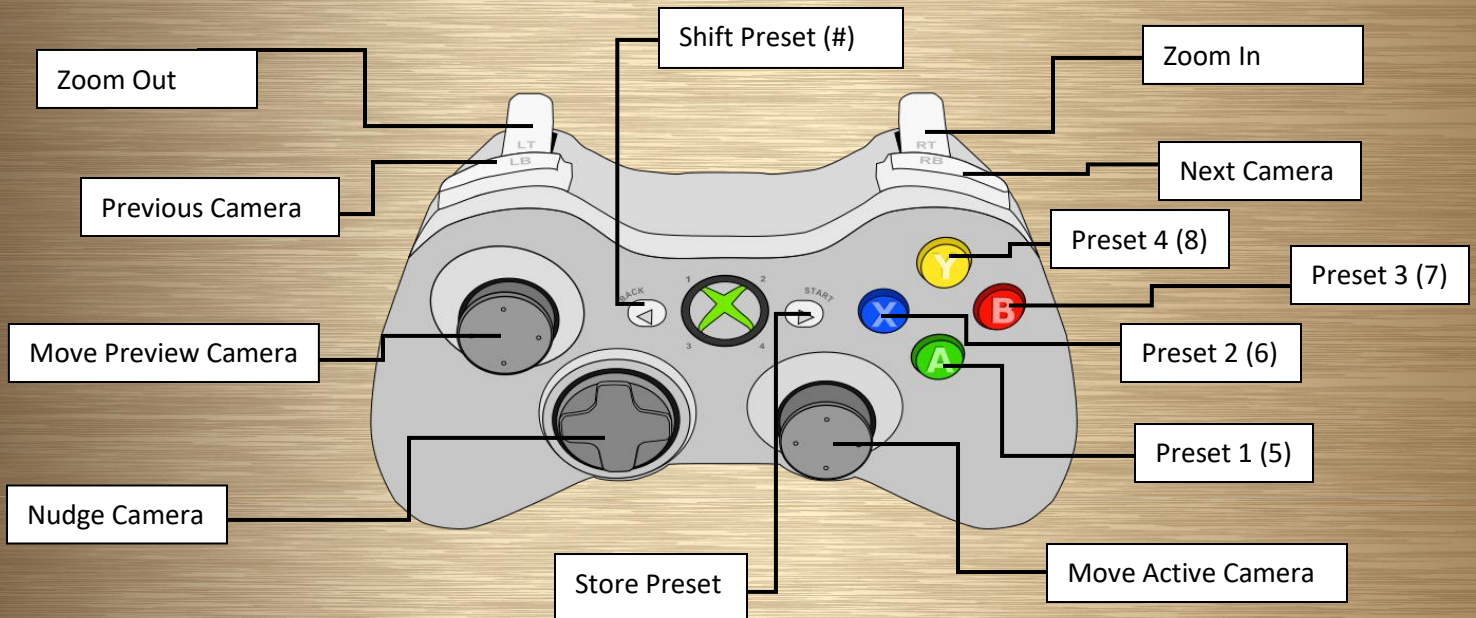

ONVIF:

- 1) Give the camera a display name
- 2) Select 'ONVIF' as camera type
- 1) Enter the camera address in the form of `http://<IP Address>` e.g. <http://192.168.10.10>
- 2) Provide username & password
- 3) Change any settings as desired
- 4) Save the camera by clicking the [Save] button

AXIS:

- 1) Give the camera a display name
- 2) Select 'Axis (IP)' as camera type
- 3) Enter the camera address in the form of `http://<IP Address>` e.g. <http://192.168.10.10>
- 4) Provide username & password
- 5) Change any settings as desired
- 6) Select the camera or view #
- 7) Save the camera by clicking the [Save] button

VISCA (Serial):

- 1) Give the camera a display name
- 2) Select 'VISCA (Serial)' as camera type
- 3) Enter the serial port in the form of `COM_` e.g. `COM2`
- 4) Change any settings as desired
- 5) Select the camera or view #
- 6) Save the camera by clicking the [Save] button

Vaddio:

- 1) Give the camera a display name
- 2) Select 'Vaddio (IP)' as camera type
- 3) Enter the camera address in the form of `http://<IP Address>` e.g. <http://192.168.10.10>
- 4) Provide username & password
- 5) Change any settings as desired
- 6) Select the camera or view #
- 7) Save the camera by clicking the [Save] button